



INSTALLATION INSTRUCTIONS


POS-T MINI COMPARTMENT

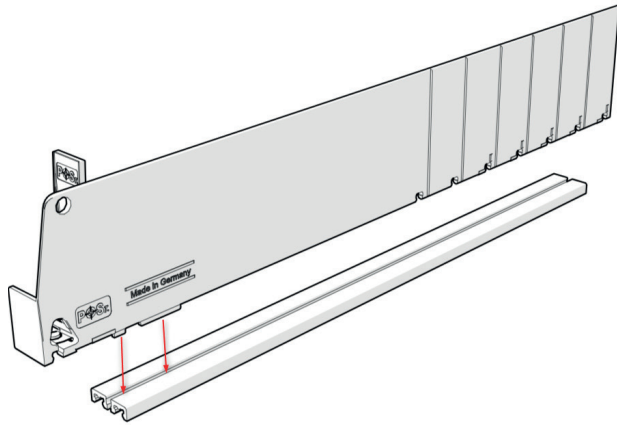

- 1 Insert the divider with pushfeed into the profile.

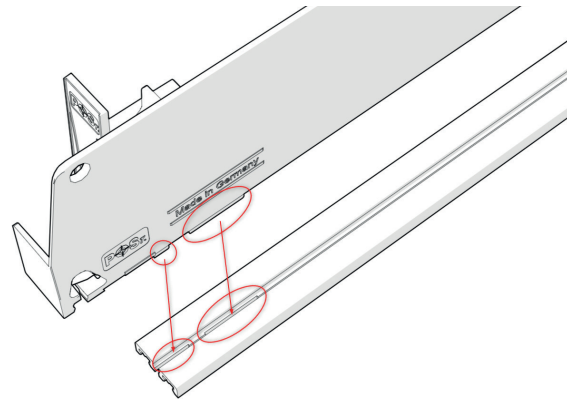

- 2 Ensure that the protrusions of the divider engage in the corresponding opening of the profile.

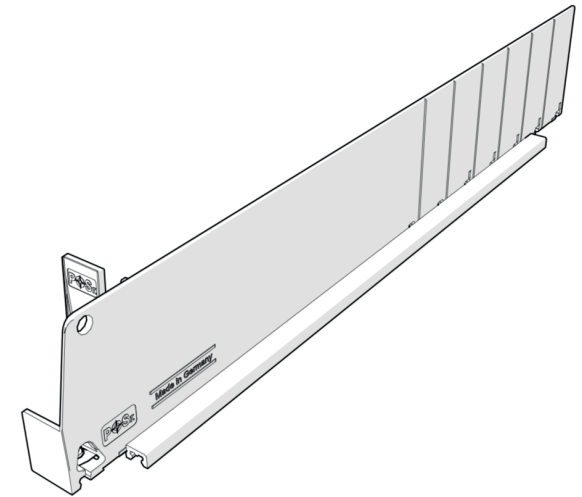

- 3 The finished Compartment System can now be clipped onto the adapter-T profile on the shelf.